

## 07.1—235 Removal and installation of fuel pump


---

Job no. of flat rates or standard texts and flat rates data 07—5710.

### Removal

---

- 1 Unscrew all fuel connections.
- 2 Release two fastening nuts and remove fuel pump.
- 3 Clean fuel pump, exchanging suction and delivery valves or fuel pump.

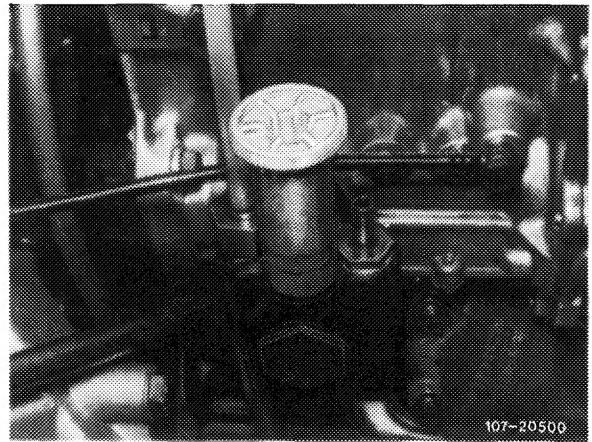

### Installation

---

- 4 Fit fuel pump using new gasket.
- 5 Attach fuel connections and vent injection system (07.1—140).
- 6 Check fuel pump (07.1—145).